





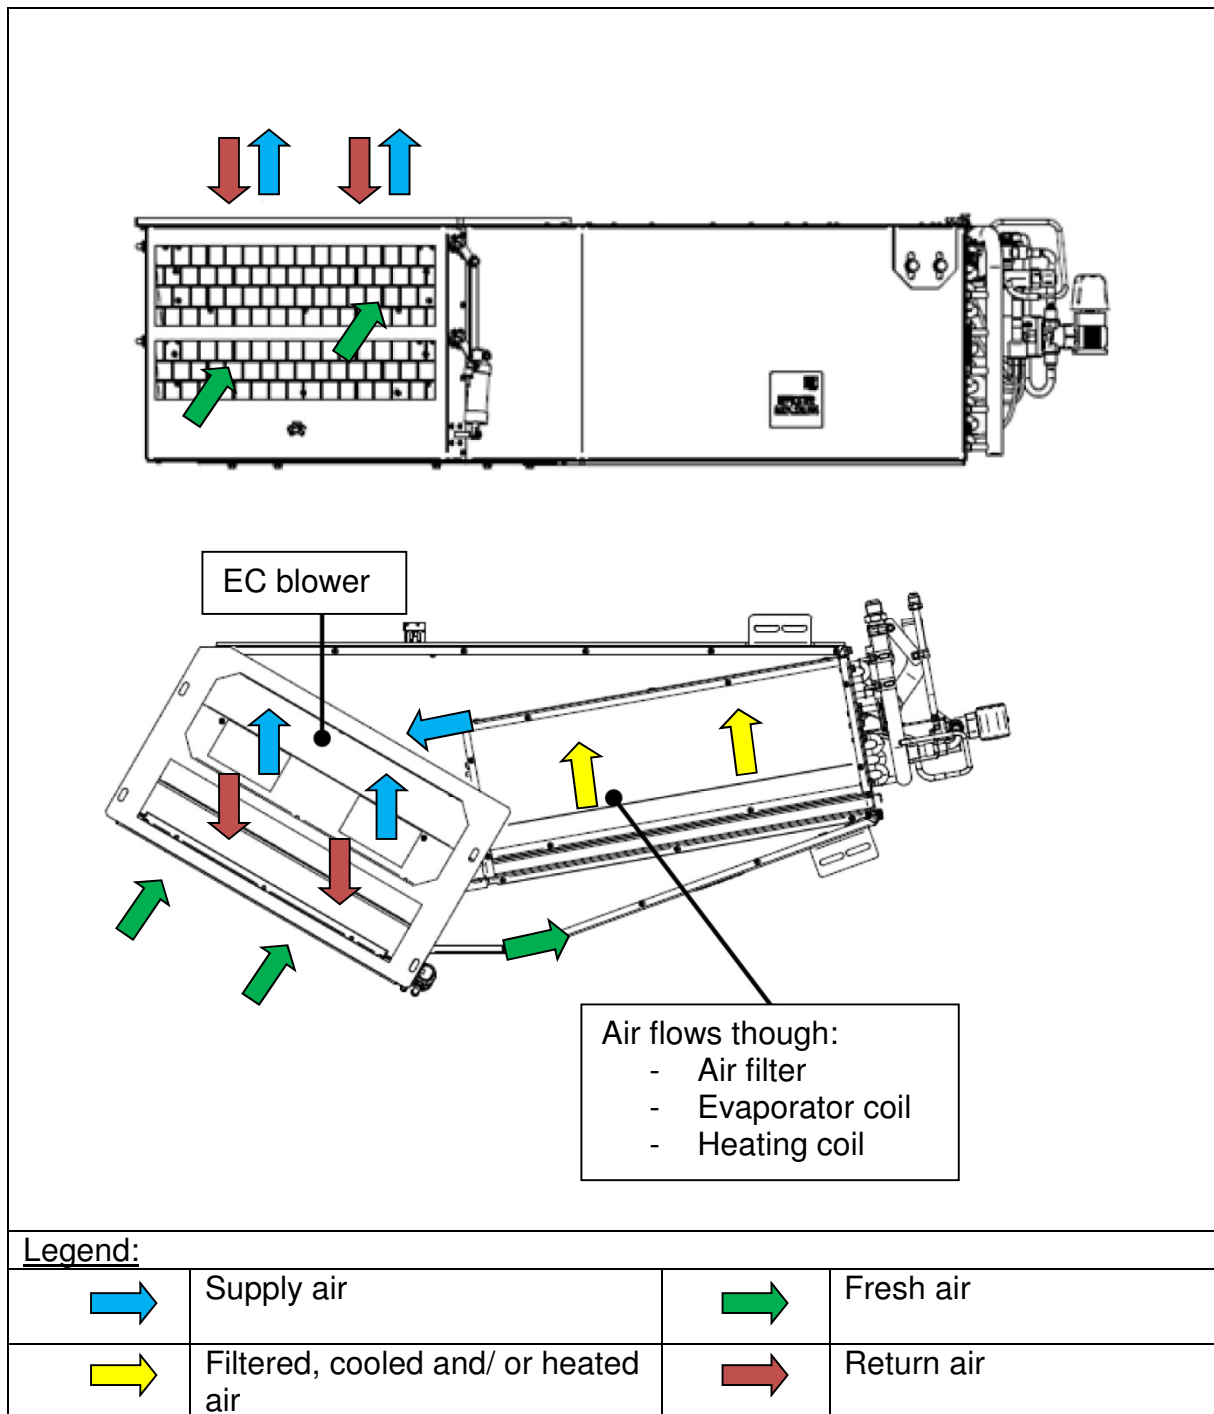

### 4.3.3. Return – fresh air organization

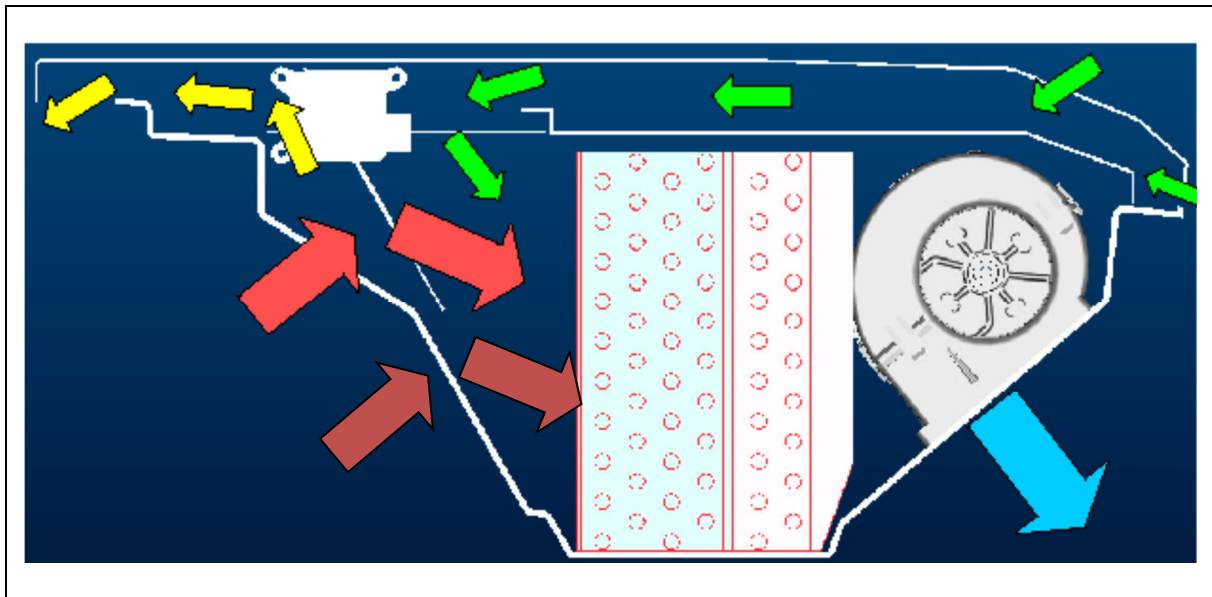

### 4.4.3. Return-, Exhaust- and Fresh air organization



Legend:

	Supply air		Fresh air
	Exhaust air		Return air

#### 4.4.3.1. Combined fresh air intake and exhaust air flap (interior)

The fresh air intake flaps can be closed by an electrically operated motor, remote controlled from the dashboard.

When the flaps are closed, their rubber seals should make full contact with the frame. If they do not, check motor for full travel and proper operation (access by removal of cover on the roof). Replace seals when necessary.