

LEFT CONSOLE PANEL & DOOR CONTROLS



REGENERATION

FORCE REGENERATION

CONTROL PANEL IN ENGINE COMPARTMENT

 "Regeneration inhibited" button
"Stationary regeneration request" button
Socket for portable lamp
Starting interlock switch
Engine compartment lights
Engine stop button

INTERIOR WHEELCHAIR LIFT COMPARTMENT



 Passenger door override control valve
Entrance door emergency release
HVAC air vent Lift lighting
Threshold warning system module
Lift door emergency air release knob

- 4 Belt cutter
- 5 Lift door emergency handle





WHEELCHAIR LIFT SYSTEM



ABC CUSTOMERCARE SERVICE 24/7

ABC CustomerCare Van Hool Technical Support Emergency Roadside Assistance

Toll-free 877-427-7278 www.abc-companies.com/care.asp



See the Difference

www.abc-companies.com



VAN HOOL C2045 DRIVER'S GUIDE



Exclusive U.S. VAN HOOL Distributor

See the Difference



LEFT HAND DASHBOARD PANEL

Master/Ignition 2 Starter 3 Defroster vent **4** Transmission shift pad





COMBINATION SWITCH ON STEERING COLUMN

1 Turn signal, high/low beam lever 2 Windshield washer 3 Horn 4 Windshield wiper control



DRIVER'S FLOORBOARD AREA Steering column control 2 Brake 3 Accelerator



CENTER INSTRUMENT PANEL

0	Parking brake applied indicator (red)
2	High beam activated (blue)
3	Turn signals activated (green)
4	Red serious fault light
5	Yellow minor fault light
6	Not used
7	Not used
8	Passenger/lift door low air tell-tale
9	Speedometer
10	Odometer
0	Fuel gauge
12	Multifunctional display messages • Low air pressure gauge
13	Multiplex function buttons
14	Outside temperature
15	Average mile per gallon
16	Tachometer
1 7	Coolant temperature gauge

CLOSED 27 37

0	Cruise co
2	Cruise co
3	Exterior I
4	Hazard v
5	Exterior I
6	Passenge
7	Cornering
8	Driver's (
9	Passenge
10	Passenge
Ō	Luggage
12	120VAC
13	Driver's
14	Driver's ı
Ð	Driver's f
16	Driver's t
	Driver's

18

Blank

19 Blank

This guide applies to Van Hool C2045 models, year 2004 and newer. Effective as of 9/1/11.

Vehicle specifications subject to change without notice. All information, illustrations, and specifications contained in this guide are based on the latest product information available at the time of production. The right is reserved to make changes at any time without notice. Please refer to all owner, operations, maintenance, or parts manuals and associated documentation for further information.



RIGHT SWITCH PANEL

- ontrol
- ontrol RES/ACCEL & SET/COAST
- mirror heating
- varning signal
- lighting
- er chime control
- g lamps
- cab lighting
- er compartment lighting
- er compartment night lighting
- compartment lighting
- system voltage inverters (optional)
- left hand sun blind
- right hand sun blind
- fan speed control
- thermostat
- fresh air control

- 20 Blank
- 21 Main climate control system
- 22 Passenger compartment thermostat
- **23** Passenger compartment fresh air
- **24** Auxiliary heater
- **25** Rear raise
- **26** Front kneeler
- **27** Wheelchair lift system (optional)
- **28** Tag axle unloading system (optional)
- **29** Passenger door open/close
- **30** Jake Brake
- **31** Automatic slip reduction (ATC)
- **32** Engine diagnostics
- **33** Engine stop override
- **34** REI radio, Elite system
- **35** REI Elite control head
- **36** REI DVD, Elite system
- **37** ProHeat Timer (optional)
- **(38)** Lock/unlock luggage compartments