

COACH MODEL : C2045, T-2140, T-2145
DATE : 2/4/2013
SUBJECT : Information About and Changing HVAC Filter/Dryer

When to change filter/dryer

"Annually, before the hot season" Refer to chapter 1.1, "Maintenance schedule". For more information.

Function of the filter/dryer


The filter/dryer catches humidity and dirt in the refrigerant circuit.

Location of the filter/dryer

The filter/dryer is mounted in the climate-control condenser compartment.

Figure: filter/dryer

Note: Arrow on Dryer should always point up.

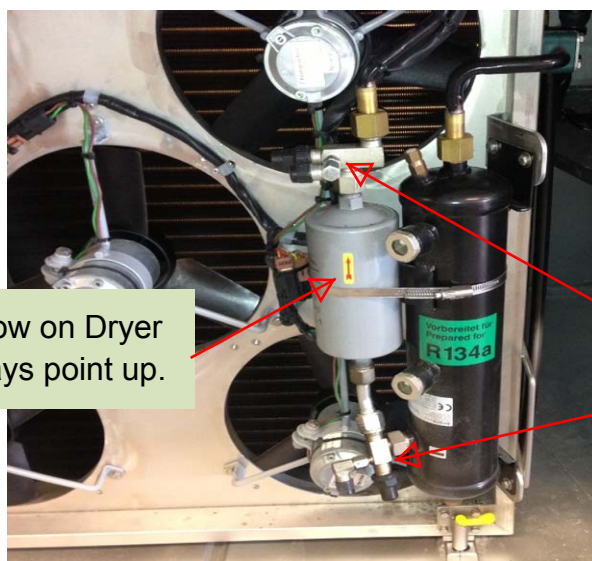

Service Valve

To remove the filter/dryer

1. Turn the stem of the two service valves, which are located above and under the filter/dryer, clockwise up to the stop.
2. Connect a recovery station to the service connection of one of the service valves, and remove the refrigerant from the filter/dryer.
3. Loosen the line connectors at the filter/dryer ends. Remove the filter/dryer.

To install filter/dryer

1. Install a new filter/dryer, use new copper washers PN# 32-23-26-236.
2. Connect the lines to the filter/dryer ends.
3. Vacuum down the filter/dryer.
4. Turn the stem of the two service valves, which are located above and under the filter/dryer, counterclockwise up to the stop.
5. Check for leaks.