

ADDRESSEES	: Owners and operators ABC Customer Care and Parts Source
VEHICLE MODEL	: CX35
SYSTEM/SUBSYSTEM	: 05.10 Brakes – Compressed-air brakes
BULLETIN TYPE	: Service Information
DATE	: January 25 th , 2019
SUBJECT	: Compressed-air brake system functional check
TERMS & CONDITIONS	: This service bulletin does not entitle to any reimbursement.

DESCRIPTION

These tests are designed to identify the cause(s) of a sluggish performance and/or leaks in the system. The tests give you a general idea of the system condition. The procedures described in this service bulletin are applicable to CX35 vehicles.

JOB QUALIFICATION:

The task has to be carried out by a technician trained in the operations at hand. If you are not sure that you're qualified, contact ABC Customer Care.

EQUIPMENT CONDITION:

- Park the coach on a level-surfaced service pit.
- Apply the parking brake and shut down the engine.
- Put a "DO NOT OPERATE" tag on the instrument panel.
- **Read the entire procedure before starting to work.**



WARNING!


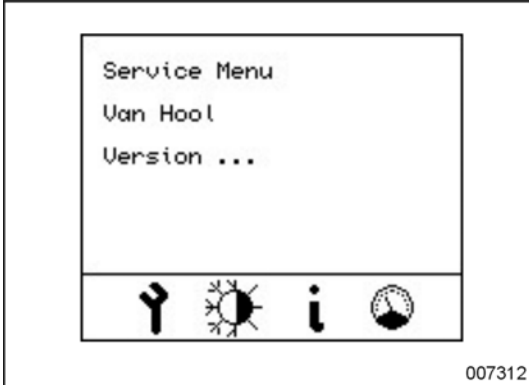
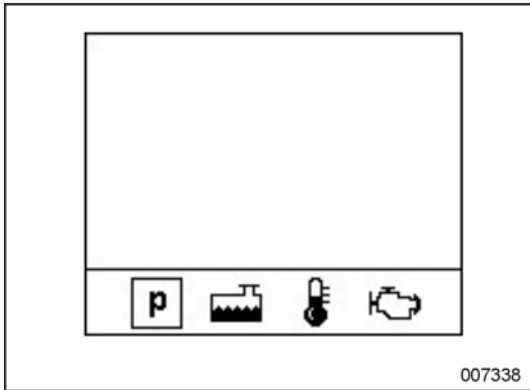
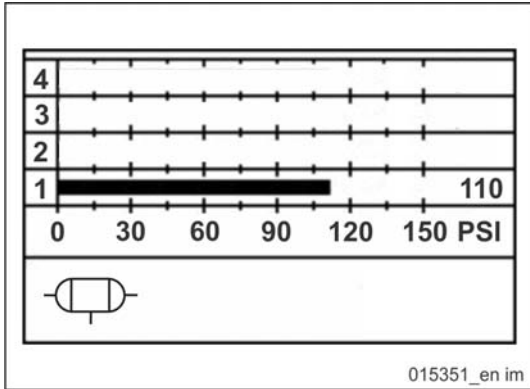
Observe safe shop practices at all times.

SAFETY INFORMATION ABOUT SYSTEMS UNDER PRESSURE:

- Do not tighten or loosen pipe or hose connections while the pipe or hose is under pressure.
- Do not check pressurized lines for leaks with your hands.
- Safely depressurize devices containing compressed air under pressure before opening them.

Continued on next page.

RETRIEVAL OF COMPRESSED-AIR TANK PRESSURES THROUGH DASHBOARD DISPLAY


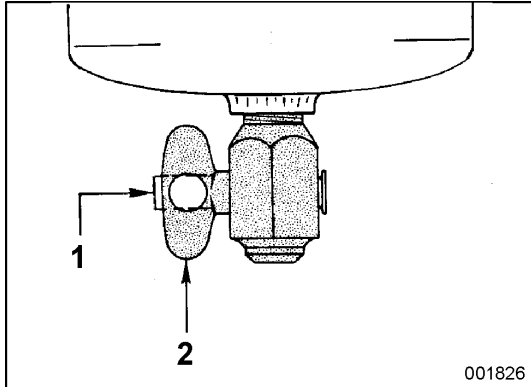
Step	Action
1	<p>Press and hold the left button under the dashboard display for longer than 5 seconds. The service menu appears on the display.</p> <div style="display: flex; justify-content: space-around;">   </div> <p>Figure 1: Left button under dashboard display Figure 2: Service menu</p>
2	<p>Press the button under the dial symbol. The garage feature menu appears on the display.</p>  <p>Figure 3: Garage feature menu</p>
3	<p>Press the pressures retrieval button (P). The first screen appears on the display. Browse through the screens with the buttons under the arrows until the required compressed-air tank pressure screen appears.</p> <div style="display: flex; justify-content: space-between;">  <div> <p>Figure 4: Compressed-air tank pressure screen (example shows pressure in front axle brakes tank)</p> <ul style="list-style-type: none"> (1) Front axle brakes tank (2) Drive-axle service brakes tank (3) Trailing axle service brake circuit (not applicable) (4) ZF Astronic transmission circuit (if applicable) </div> </div>

Continued on next page.


PROCEDURE:

Step	Action
1	Prior to performing any test, check condition of all air lines. Check pipes for kinks or dents, hoses for signs of wear or overheating.
2	Put chocks in front of and behind the front-axle wheels.
3	Test the compressed-air supply system as explained in "STEP 3 IN DETAIL".
4	Test the tank supply circuit for leakage as indicated in "STEP 4 IN DETAIL".
5	Test the parking brake operation as indicated in "STEP 5 IN DETAIL".
6	Test the service brake delivery circuits for leakage as indicated in "STEP 6 IN DETAIL".
7	Test the one way check valves operation as indicated in "STEP 7 IN DETAIL".
8	Test the operation of the dual air system as indicated in "STEP 8 IN DETAIL".

STEP 3 IN DETAIL: To test compressed-air supply system (pressure build-up, low pressure warning, governor operation)

Step	Action
3.1	Connect an accurate pressure gauge to the test fitting (identified by two red adhesive tapes) behind the front bumper.
3.2	<div> WARNING! Use appropriate hearing protection while draining the air tanks.</div> <p>Completely drain the entire air system by using the drain cocks on the air tanks. Refer to figure 9 at the end of this service bulletin for air tanks location.</p> <div></div> <div>Figure 5: Compressed-air tank drain cock, previous model 1. Closed 2. Open</div>
3.3	Close the air tanks cocks if the compressed-air system is drained.

Continued on next page.

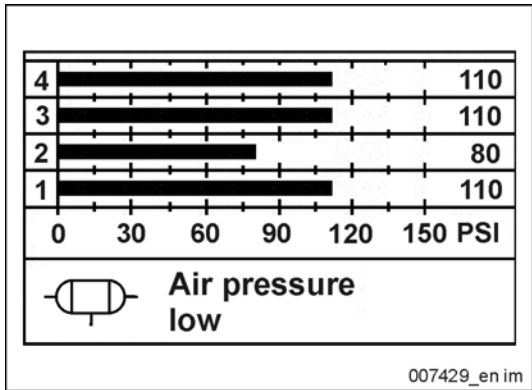3.4	<p>Turn the vehicle ignition on.</p> <p>Low air warning on dashboard should appear and low air buzzer should sound. If not so, check installation.</p> <div data-bbox="406 360 940 748">  </div> <p>Figure 6: Low air warning on dashboard display (example shows a low pressure condition in circuit 2)</p> <ul style="list-style-type: none"> (1) Front axle brakes tank (2) Drive-axle service brakes tank (3) Trailing-axle service brake circuit (not applicable) (4) ZF Astronic transmission circuit (if applicable) 						
3.5	<p>Start the engine and run at 1,600 rpm.</p> <p>Low air warning should disappear and buzzer should stop when pressure reaches 80 psi. If not so, check installation.</p>						
3.6	<p>Start timing as system pressure reaches 85 psi and stop at 100 psi.</p> <p>Air build-up time should be 45 seconds or less. If the build-up time is excessive, check:</p> <ul style="list-style-type: none"> • for excessive air system leakage; • for restrictions in the air compressor inlet or discharge lines (carbon build-up); • Air compressor condition (excessive wear on piston rings and/or cylinders); • operation of air compressor inlet and discharge valves. 						
3.7	<p>Idle the engine. Observe reading on the air pressure gauge when governor cuts out the compressor. The reading should be as indicated in table 1.</p> <table border="1" data-bbox="561 1305 1248 1413"> <thead> <tr> <th colspan="2">Table 1: Governor setting</th></tr> <tr> <th>Cut-in pressure (psi)</th><th>Cut-out pressure (psi)</th></tr> </thead> <tbody> <tr> <td>115 +0/-5 psi</td><td>135 ± 5 psi</td></tr> </tbody> </table>	Table 1: Governor setting		Cut-in pressure (psi)	Cut-out pressure (psi)	115 +0/-5 psi	135 ± 5 psi
Table 1: Governor setting							
Cut-in pressure (psi)	Cut-out pressure (psi)						
115 +0/-5 psi	135 ± 5 psi						
3.8	<p>With the engine still running, slowly reduce air pressure in the system by applying and releasing the brakes. Observe reading on pressure gauge when governor cuts in the compressor. The reading should be as indicated in table 1. If not so, check the operation of the governor and the unloading mechanism on the compressor.</p>						

STEP 4 IN DETAIL: To test tank supply circuit for leakage

Step	Action
4.1	Connect an accurate pressure gauge to the test fitting (identified by two red adhesive tapes) behind the front bumper.
4.2	Fully charge the air system and stop the engine.
4.3	Allow pressure to stabilize for at least 1 minute.
4.4	<p>Observe the pressure gauge for 2 minutes, and note any pressure drop.</p> <p>Pressure drop should not be more than 3 psi per minute. If not so, coat all air line connections and pneumatic components with a water and soap solution. Bubbles will indicate an air leak, and none should be permissible. Repair or replace defective parts.</p>

Continued on next page.

STEP 5 IN DETAIL: To test parking brake operation



Step	Action
5.1	Connect an accurate pressure gauge to the test fitting in the air line leading to the spring brake part of the brake cylinder of the left-hand drive wheel.
5.2	Fully charge the air system and stop the engine.
5.3	Pull the parking brake button to apply the parking brake. The pressure gauge should indicate no pressure. 
5.4	Push and hold the emergency parking brake release button to release the parking brake. The pressure gauge should indicate pressure. 
5.5	Release the emergency parking brake release button.
5.6	Push the parking brake button to release the parking brake. The pressure gauge should indicate pressure.
5.7	Reduce air pressure in the system by applying and releasing the foot brake. Low air warning on dashboard should appear and low air buzzer should sound when pressure drops to 80 psi. Drive axle spring brakes should apply when pressure drops to approximately 60 psi.

Figure 7: Parking brake button**Figure 8: Emergency parking brake release button***Continued on next page.*

STEP 6 IN DETAIL: To test service brake delivery circuits for leakage

Step	Action
6.1	Connect accurate pressure gauges to: <ul style="list-style-type: none">the test fitting in the air line leading to the brake cylinder of a front axle wheel;the test fitting in the air line leading to the service part of a brake cylinder of a drive axle wheel.
6.2	Fully charge the air system and stop the engine.
6.3	Apply the foot brake pedal, allow pressure to stabilize for at least 1 minute.
6.4	Hold down the foot brake pedal for 2 minutes while observing the pressure gauge. Pressure drop should not be more than 4 psi per minute. If not so, coat all brake air line connections and pneumatic components with a water and soap solution. Bubbles will indicate an air leak, and none should be permissible. Repair or replace defective parts.

STEP 7 IN DETAIL: To test operation of one way check valves**WARNING!**

Use appropriate hearing protection while draining the air tanks.

Step	Action
7.1	Fully charge the air system and stop the engine.
7.2	Retrieve the compressed-air tank pressures screen on the dashboard display through the garage feature menu.
7.3	Drain the wet tank. The compressed-air tank pressures screen on the dashboard display should not indicate a loss of pressure.
7.4	Close the wet tank drain cock.

STEP 8 IN DETAIL: To test operation of dual air system**WARNING!**

Use appropriate hearing protection while draining the air tanks.

Step	Action
8.1	Connect accurate pressure gauges to: <ul style="list-style-type: none">the test fitting in the air line leading to the brake cylinder of a front axle wheel;the test fitting in the air line leading to the service part of a brake cylinder of a drive axle wheel;
8.2	Fully charge the air system and stop the engine.
8.3	Drain the drive axle service brakes tank.
8.4	Make a service brake application and check whether the pressure gauge connected to the front axle brakes indicate pressure.
8.5	Close the drain valve of the drive axle service brakes tank.
8.6	Start the engine and fully charge the air system again.
8.7	Stop the engine.
8.8	Drain the front axle brakes tank.
8.9	Make a service brake application and check whether the pressure gauge connected to the drive axle brakes indicate pressure.

Continued on next page

8.10	Close the drain valve of the front axle brakes tank.
8.16	Start the engine and fully charge the air system again.
8.17	Stop the engine.

LOCATION OF COMPRESSED-AIR TANKS

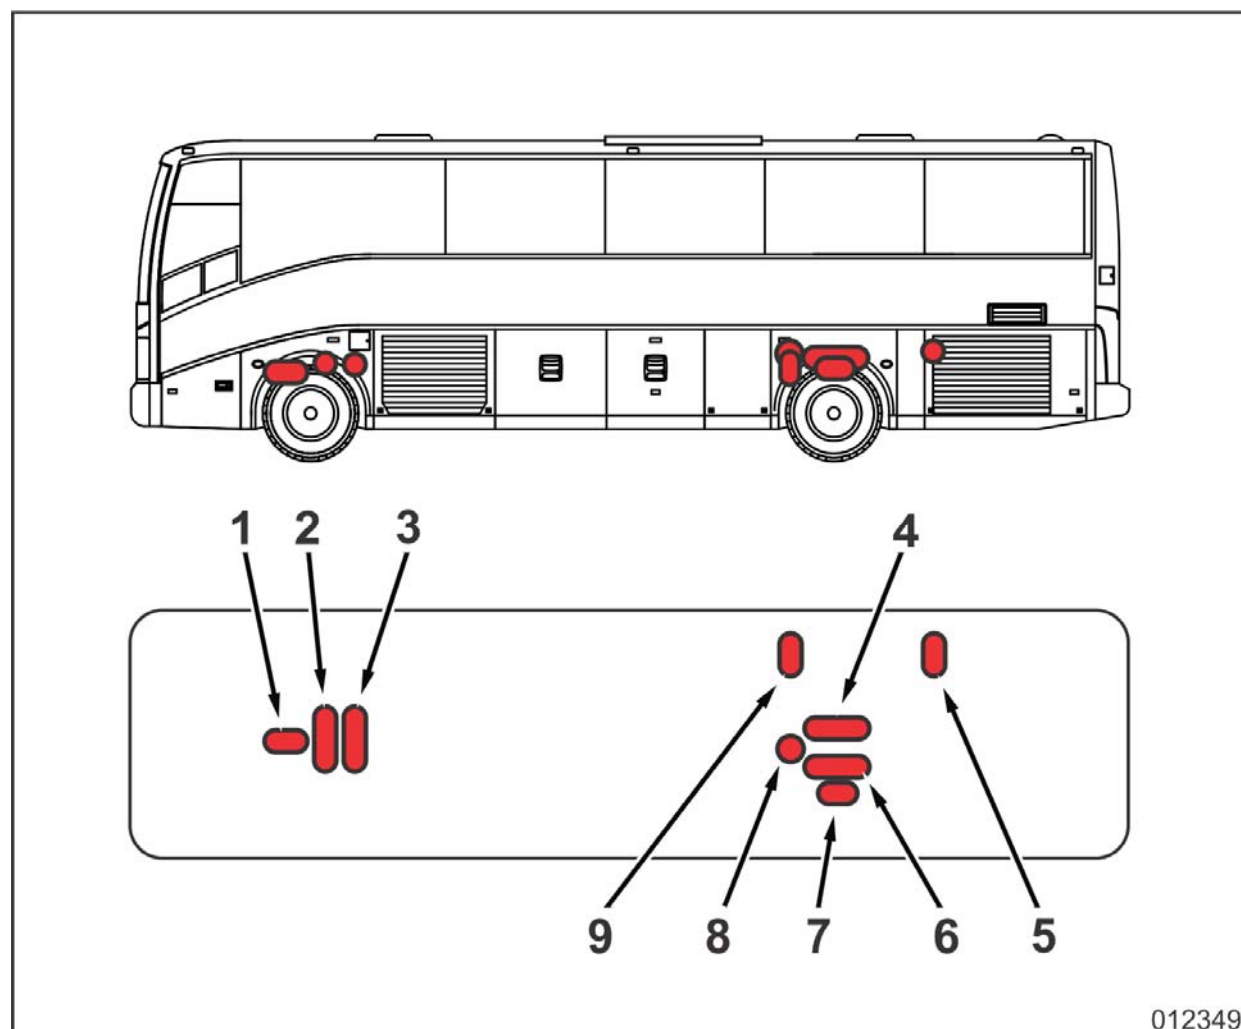


Figure 9: Location of compressed-air tank on CX35

1. Kneeling system
2. Front axle brakes
3. Accessories
4. Rear raising
5. Parking brake emergency release
6. Drive axle service brakes
7. Air-dryer regeneration
8. Wet tank
9. ZF Astronic (vehicles with ZF Astronic transmission only)

HELP DESK:

Consult ABC Customer Care & Parts Source toll-free for guidance on 1-877-427-7278. Listen for the prompts for warranty and select that option.

Continued on next page.

DISCLAIMER:

The procedures contained herein are not exclusive. Van Hool cannot possibly know, evaluate, or advise the transportation industry of all conceivable ways in which a procedure may be undertaken or of the possible consequences of each such procedure. Other procedures may be as good, or better, depending upon the particular circumstances involved. Each carrier who uses the procedures herein must first satisfy itself thoroughly that neither the safety of its employees or agents, nor the safety or usefulness of any products, will be jeopardized by any procedure selected.

INFORMATION HANDLING:

Important supplements to and modifications of technical information not yet included in the manual, are communicated by means of Service Bulletins.

VAN HOOL CUSTOMER PORTAL:

Consult the customer portal regularly for the latest service documentation. Beside the maintenance manual, you will also find the operating manual and the spare parts catalogue of your vehicle on the customer portal. The customer portal is accessible through www.vanhool.be, and only with a code (password) from Van Hool. If you do not have a password yet, request it by using the link on the Van Hool website.