

FECH TIPS #1505

SUBJECT :	SOS Symbol Intermittently Appear in Display When Driving in Rain
DATE :	6/09/2015
COACH MODEL :	TX40 & TX45

If an intermittent "SOS symbols (passengers emergency signal)" appear in display, especially under wet condition, on some coaches there may be a wire bundle located at road side tag wheel above the mud flap that are not used. This bundle may become frayed with wear over time and susceptible to shorts due to water intrusion. The compromised wires result in a visual and audible "SOS symbols" in the dashboard display. In the event of a nuisance "SOS symbols", this wire bundle should be the first step in trouble shooting.

If wire bundle is present, cut off excess wire and insulate each wire and heat shrink wires to protect againest road debris and water cuising false "SOS symbols" request in display.



NOTE: Looking from under coach upward inside left tag above mud flap