




LEFT CONSOLE PANEL

- 1 Parking brake emergency release knob
- 2 12V socket
- 3 Data link connections



DOOR CONTROLS

- 1 Passenger door override control valve
- 2 Entrance door emergency release

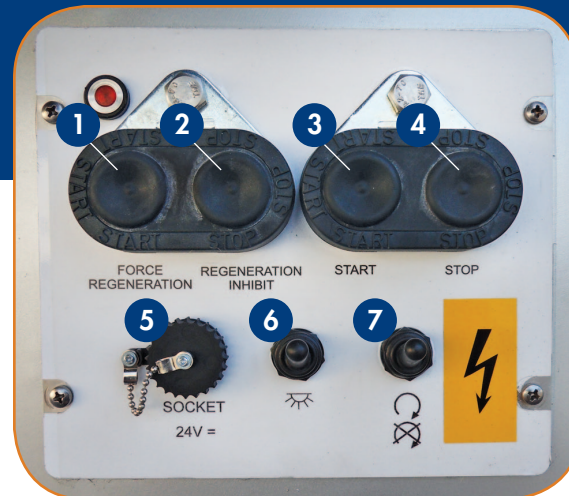

CONTROL PANEL IN ENGINE COMPARTMENT

- 1 "Force Regeneration" button
- 2 "Regeneration inhibit" button
- 3 Engine start button
- 4 Engine stop button
- 5 Light socket 24 volt
- 6 Engine compartment light
- 7 Starting interlock switch

INTERIOR WHEELCHAIR LIFT COMPARTMENT

- 1 Lift lighting
- 2 Threshold warning system module
- 3 Lift door emergency air release knob
- 4 Lift spotlight
- 5 Belt cutter
- 6 Lift door emergency handle



VAN HOOOL T2100 DRIVER'S GUIDE



WHEELCHAIR LIFT SYSTEM



MANUAL BYPASS KNOBS

- 1 Bridgeplate
- 2 Up or down
- 3 Stow
- 4 Deploy



CONTROL PENDANT

- 1 Power
- 2 Deploy
- 3 Stow
- 4 Down
- 5 Up

ABC CUSTOMERCARE SERVICE 24/7

ABC CustomerCare
Van Hool Technical Support
Emergency Roadside Assistance
Toll-free 877-427-7278
www.abc-companies.com/care.asp



www.abc-companies.com



T2100

DRIVER'S GUIDE


CONSOLE PANEL & DOOR CONTROLS

- 1 Cruise control
- 2 Cruise control RES/ACCEL & SET/COAST
- 3 Defroster vent
- 4 Transmission shift pad
- 5 Emergency cut-off switch



COMBINATION SWITCH ON STEERING COLUMN

- 1 Turn signal, high/low beam lever
- 2 Windshield washer
- 3 Horn
- 4 Windshield wiper control

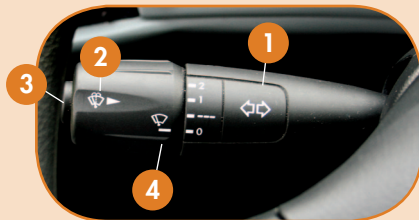

DRIVER'S FLOORBOARD AREA

- 1 Steering column control
- 2 Brake
- 3 Accelerator



CENTER INSTRUMENT PANEL

- 1 Parking brake applied indicator (red)
- 2 High beam activated (blue)
- 3 Turn signals activated (green)
- 4 Red serious fault light
- 5 Yellow minor fault light
- 6 Not used
- 7 Not used
- 8 Passenger/lift door low air tell-tale
- 9 Speedometer
- 10 Odometer
- 11 Fuel gauge
- 12 Multifunctional display messages
 - Low air pressure gauge
- 13 Multiplex function buttons
- 14 Outside temperature
- 15 Average mile per gallon
- 16 Tachometer
- 17 Coolant temperature gauge



RIGHT SWITCH PANEL

- 1 Mirror adjusting switch
- 2 Hazard warning signal
- 3 Master/ignition
- 4 Blank
- 5 Blank
- 6 Blank
- 7 Blank
- 8 Blank
- 9 Blank
- 10 120VAC system voltage inverters (optional)
- 11 Exterior mirror heating
- 12 Driver's left hand sun blind
- 13 Driver's right hand sun blind
- 14 Exterior lighting
- 15 Passenger chime control
- 16 Cornering lamps
- 17 Driver's cab lighting
- 18 Passenger compartment lighting
- 19 Passenger compartment night lighting
- 20 Luggage compartment lighting
- 21 Guide reading lighting
- 22 Blank
- 23 Blank
- 24 Blank
- 25 Raise/lower from normal ride height
- 26 Front kneeler
- 27 Wheelchair lift system (optional)
- 28 Tag axle unloading system
- 29 Passenger door open/close
- 30 Start
- 31 Jake Brake
- 32 Automatic slip reduction (ATC)
- 33 Blank
- 34 Engine stop override
- 35 Parking brake control
- 36 Smart wave display (optional)
- 37 Main climate control system
- 38 Passenger compartment thermostat
- 39 Passenger compartment fresh air
- 40 Auxiliary heater
- 41 ProHeat Timer (optional)
- 42 Lock/unlock luggage compartments
- 43 Driver's fan speed control
- 44 Driver's thermostat
- 45 Driver's fresh air control
- 46 REI radio, Elite system
- 47 REI Elite control head
- 48 REI DVD, Elite system

This guide applies to Van Hool T2100 models, year 2004 and newer. Effective as of 1/1/12.

Vehicle specifications subject to change without notice. All information, illustrations, and specifications contained in this guide are based on the latest product information available at the time of production. The right is reserved to make changes at any time without notice.

Please refer to all owner, operations, maintenance, or parts manuals and associated documentation for further information.