



VAN HOO L

TD925

DRIVER'S GUIDE



Exclusive U.S. **VAN HOO L** Distributor

See the Difference

TD925

DRIVER'S GUIDE


LEFT HAND DASHBOARD PANEL

- | | |
|--|---|
| 1 Hazard warning | 15 Master/Ignition |
| 2 Engine starter button | 16 12V socket |
| 3 Driver's cab lighting | 17 Emergency cut-off switch |
| 4 Passenger compartment night lighting | 18 Cruise control |
| 5 Passenger compartment lighting | 19 Cruise control RES/ACCEL & SET/COAST |
| 6 Exterior lighting | 20 Engine stop override |
| 7 Transmission shift pad | 21 Automatic slip reduction (ATC) |
| 8 Lincoln tunnel suspension control (optional) | 22 Switch off retarder foot control |
| 9 Raise/lower from normal ride height | |
| 10 Front kneeler | |
| 11 Tag axle unloading system (optional) | |
| 12 Mirror adjusting switch | |
| 13 120VAC system voltage inverters (optional) | |
| 14 Blank | |



COMBINATION SWITCH ON STEERING COLUMN

- | |
|------------------------------------|
| 1 Turn signal, high/low beam lever |
| 2 Windshield washer |
| 3 Horn |
| 4 Windshield wiper control |

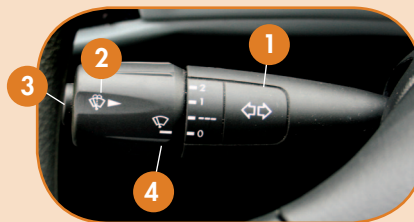

LEFT CONSOLE PANEL

- | |
|-----------------------------------|
| 1 Parking brake control |
| 2 Parking brake emergency release |





CENTER INSTRUMENT PANEL

- | | |
|---|---|
| 1 Parking brake applied indicator (red) | 10 Odometer |
| 2 High beam activated (blue) | 11 Fuel gauge |
| 3 Turn signals activated (green) | 12 Multifunction display messages <ul style="list-style-type: none"> • Low air pressure gauge • Outside temperature • Average miles per gallon |
| 4 Red serious fault light | 13 Multiplex function buttons |
| 5 Yellow minor fault light | 14 Tachometer |
| 6 Not used | 15 Coolant temperature gauge |
| 7 Not used | |
| 8 Passenger/lift door low air tell-tale | |
| 9 Speedometer | |

ENTERTAINMENT / SAUCON TDS / AESYS DESTINATION SIGN (OPTIONAL)



- | |
|--|
| 1 Bosch radio (AM/FM)/CD |
| 2 Bosch DVD player |
| 3 AESYS destination sign controller |
| 4 Saucun TDS control box |
| 5 Monitor for outside reverse camera & upper deck camera |



RIGHT SWITCH PANEL

- | | |
|--|-----------------------------------|
| 1 Driver's thermostat | 5 Front passenger door open/close |
| 2 Driver's fan speed control | 6 Rear passenger door open/close |
| 3 Blank | 7 Luggage door open/close |
| 4 Lane departure warning system indicators | 8 Smartwave display (optional) |

DOOR CONTROLS (FRONT & REAR)

- 1 Entrance door emergency air release
- 2 Rear door emergency air release (located near each door)



DRIVER'S FLOORBOARD AREA

- 1 Steering column control
- 2 Brake
- 3 Accelerator

This guide applies to Van Hool TD925 models, year 2004 and newer. Effective as of 3/1/12.

Vehicle specifications subject to change without notice. All information, illustrations, and specifications contained in this guide are based on the latest product information available at the time of production. The right is reserved to make changes at any time without notice.

Please refer to all owner, operations, maintenance, or parts manuals and associated documentation for further information.

EXTERIOR CONTROLS (OUTSIDE OF COACH, RIGHT SIDE)

- 1 Entrance door emergency release
- 2 Windshield washer tank




DEF (Diesel Exhaust Fluid) filler opening



WHEELCHAIR ACCESS

- 1 Wheelchair ramp
- 2 Rear door emergency release
- 3 Belt cutter
- 4 Lavatory emergency door key

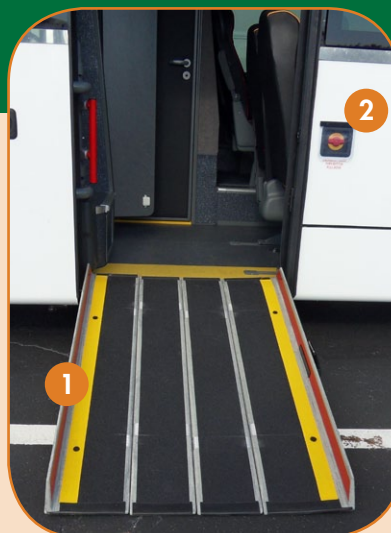



CONTROL PANEL IN ENGINE COMPARTMENT

- 1 Engine stop button
- 2 Engine start button
- 3 Socket for portable lamp
- 4 Starting interlock switch
- 5 Engine diagnostic socket
- 6 Engine compartment lights
- 7 Regeneration inhibited button
- 8 Stationary regeneration request button

DIAGNOSTIC PLUGS (ABOVE WINDSHIELD, RIGHT SIDE)

- 1 Engine flash codes
- 2 Transmission diagnostic
- 3 Multiplex diagnostic
- 4 Engine diagnostic
- 5 ABS diagnostic



ABC CUSTOMERCARE SERVICE 24/7

ABC CustomerCare
Van Hool Technical Support
Emergency Roadside Assistance

Toll-free 877-427-7278

www.abc-companies.com/care.asp



Exclusive U.S. **vanhool** Distributor

See the Difference

www.abc-companies.com