

Service Bulletin No. 1090

Circulate to listed addressees

COACH MODEL : C2045

BULLETIN TYPE: Service Information

MANUAL & SECTION : Maintenance Manual: Chapter 11 - Body and accessories

Spare parts Manual: Sections 738109 and 738209 - Bumpers

PARTS BOOK REVISION: Yes

DATE : October 1st, 2001

SUBJECT : Thermoplastic bumper shells - fasteners

TERMS & CONDITIONS: No claims will be accepted with reference to this Bulletin.

APPLICATION:

The modification subject of this Bulletin is applicable to the following units:

Model	Engine	VIN
C2045	Cummins	45254 → 45331
	Detroit Diesel	45703 → 45770

DESCRIPTION:

Effective as from units 45254 (Cummins) and 45703 (Detroit Diesel), energy absorbing bumpers with a thermoplastic shell have been cut into production.

Field experience has shown that flexing of the bumper shell may cause it to become loose and generate noise. This may be remedied by installing conical washers between the shell nuts and the backup beam. The issue has been addressed in production as of units 45331 (Cummins) and 45770 (Detroit Diesel).

Should bumper shell loosening occur, washers may be installed during the next service interval. Refer to the procedure further in this Bulletin for fitting instructions.

Service personnel: please read, initial and circulate

Service	Parts	Warranty	Workshop	Service
Manager	Manager	Administrator	Foreman	Technician

K:\SERVICEBIUSA\PmSB#\SB1090 Page 1 of 4

PARTS (see Figure 1):

Part No.	Description	Qty.
VH 660629106	Plain washer, 24x13x2.5 mm, stainless	6
VH 10745959	Conical washer, 16x8.2x0.9 mm, stainless	6

- Parts may be obtained through regular channels.
- Always use genuine maintenance products and parts. Do not accept imitations.

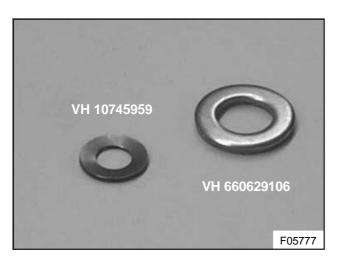


Figure 1: Bumper shell washers

PROCEDURE:

1. General:

• The time required to install the bumper shell washers is approximately 10 minutes.

2. Special tools/shop equipment:

No special tools are required.

3. Preparations:

- Park the coach on a level surface, apply the parking brake and shut down the engine.
- Switch off all systems and turn off the battery master switch.
- Put a "DO NOT OPERATE" tag on the instrument panel.
- Read the entire procedure before beginning to work.

4. To install bumper shell washers VH 660629106 and VH 10745959:

- 1) Undo and remove one of the six nuts securing the bumper shell to the backup beam.
- 2) Install washers VH 660629106 and VH 10745959 as shown in Figure 2.

- 3) Run-up a new self-locking nut VH 660207107.
- 4) Tighten the nut to a torque of 15 ft.lbf (20 Nm).
- 5) Repeat steps one through four for the five remaining bumper shell studs.

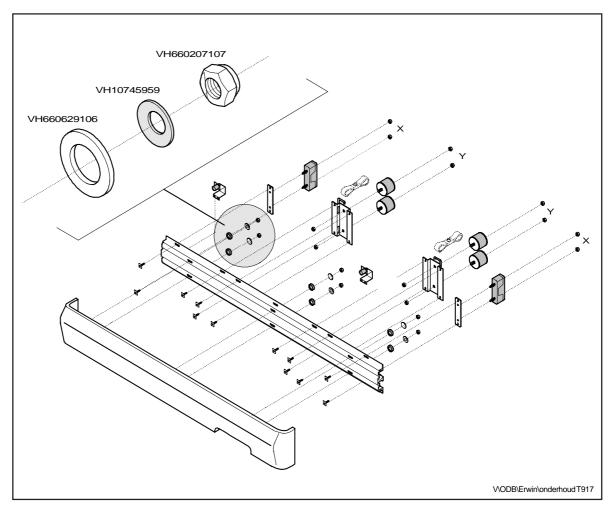


Figure 2: Bumper shell washer and nut installation

Procedure complete.

SERVICE INFORMATION:

Service Bulletins are issued to supplement or supersede information in the Van Hool manuals. Note Service Bulletin number, date and subject on the register at the end of the relevant chapter(s). File Service Bulletin separately for future reference.

K:\SERVICEBIUSA\PmSB#\SB1090 Page 3 of 4

THIS PAGE HAS BEEN LEFT BLANK INTENTIONALLY

Page 4 of 4