


COACH MODEL : T2140, T2145, C2045
DATE : 04/01/2011
SUBJECT : New Hazard Switch Wire Instruction

OLD PART
PART # 660761405

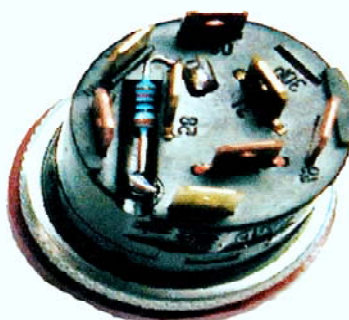

NEW PART
PART # 10753354



When changing switches a new plug is needed and wiring needs to be modified as shown below. Plug part number is 10753357.

Old plug wiring:

49a: Blue with Violet tracer
49: Blue with orange tracer
30b: Orange with Violet tracer
R: Violet with Yellow tracer
30: Yellow
15: Yellow with Blue tracer
L: Violet
31: Yellow with Blue tracer

New plug wiring:

49a: Blue with Violet tracer
49: Yellow
58: To the grey wire of dashboard rheostat PT2
R: Violet with Yellow tracer
30: Orange with Violet tracer
L: Violet
15: No Wire
30b: No Wire
31: add a Brown wire to Ground stud

Other parts needed:

2ea. connector Part # 660765190
1ea. connector Part # 660766405

(Remove and guard the jumper wire "Yellow with Blue tracer" from the main Yellow with Blue tracer of the coach wiring harness. Then Butt connect the Yellow with Blue tracer wire to the Blue with orange tracer wire.)