

ADDRESSEES	: Owners and operators ABC Customer Care and Parts Source
VEHICLE MODEL	: CX45
SYSTEM/SUBSYSTEM	: 05.10 Brakes – Compressed-air brakes
BULLETIN TYPE	: Service Information
DATE	: January 25 th , 2019
SUBJECT	: Compressed-air brake system functional check
TERMS & CONDITIONS	: This service bulletin does not entitle to any reimbursement.

DESCRIPTION

These tests are designed to identify the cause(s) of a sluggish performance and/or leaks in the system. The tests give you a general idea of the system condition. The procedures described in this service bulletin are applicable to CX45 vehicles.

JOB QUALIFICATION:

The task has to be carried out by a technician trained in the operations at hand. If you are not sure that you're qualified, contact ABC Customer Care.

EQUIPMENT CONDITION:

- Park the coach on a level-surfaced service pit.
- Apply the parking brake and shut down the engine.
- Put a "DO NOT OPERATE" tag on the instrument panel.
- **Read the entire procedure before starting to work.**



WARNING!

Observe safe shop practices at all times.

SAFETY INFORMATION ABOUT SYSTEMS UNDER PRESSURE:

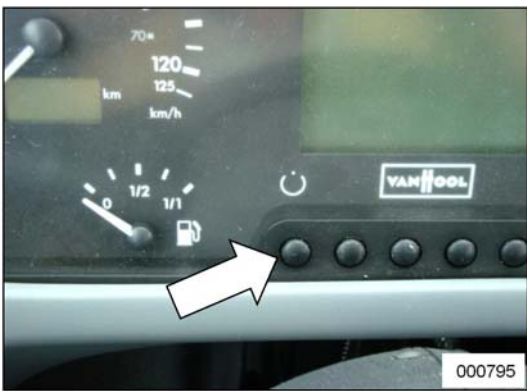
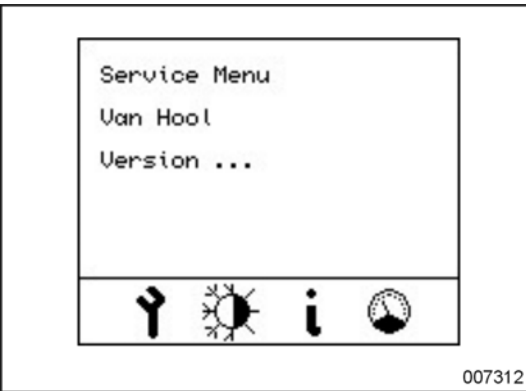
- Do not tighten or loosen pipe or hose connections while the pipe or hose is under pressure.
- Do not check pressurized lines for leaks with your hands.
- Safely depressurize devices containing compressed air under pressure before opening them.

Continued on next page.

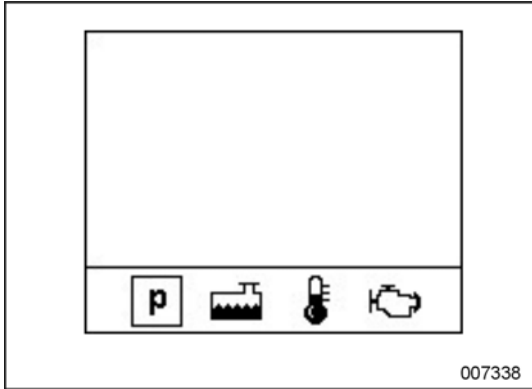
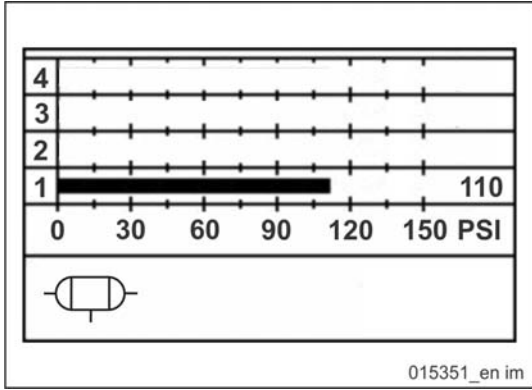
LOCATION OF PARKING BRAKE CYLINDERS:

Table 1: Location of parking brake cylinders	
VIN range	Axles with parking brake cylinders
48200 → 48203 48205 → 48249 48268 → 48270 48272 → 48281 48283 → 48287 48289 → 48295 48297 → 48306 48309 → 48314 48317 → 48321 48323 → 48336 48341 → 48344 48346 → 48384 48400 → 48423	Drive axle only
48204 48250 → 48267 48271 48282 48288 48296 48307 → 48308 48315 → 48316 48322 48337 → 48340 48345 48385 → 48399 48424 → ...	Drive and tag axle

RETRIEVAL OF COMPRESSED-AIR TANK PRESSURES THROUGH DASHBOARD DISPLAY:

Step	Action
1	<p>Press and hold the left button under the dashboard display for longer than 5 seconds. The service menu appears on the display.</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;">  <p>000795</p> <p>Figure 1: Left button under dashboard display</p> </div> <div style="text-align: center;">  <p>007312</p> <p>Figure 2: Service menu</p> </div> </div>

Continued on next page.

<p>2</p>	<p>Press the button under the dial symbol. The garage feature menu appears on the display.</p>  <p>007338</p>	<p>Figure 3: Garage feature menu</p>
<p>3</p>	<p>Press the pressures retrieval button (P). The first screen appears on the display. Browse through the screens with the buttons under the arrows until the required compressed-air tank pressure screen appears.</p>  <p>015351_en im</p>	<p>Figure 4: Compressed-air tank pressure screen (example shows pressure in front axle brakes tank)</p> <ul style="list-style-type: none"> (1) Front axle brakes tank (2) Drive-axle service brakes tank (3) Trailing-axle (service) brake tank (4) ZF Astronic transmission circuit (if applicable)

PROCEDURE:

Step	Action
1	Put chocks in front of and behind the front-axle wheels.
2	Prior to performing any test, check the condition of all air lines. Check the pipes for kinks or dents, the hoses for signs of wear or overheating.
3	Test the compressed-air supply system as explained in "STEP 3 IN DETAIL".
4	Test the tank supply circuit for leakage as indicated in "STEP 4 IN DETAIL".
5	Test the parking brake operation as indicated in "STEP 5 IN DETAIL".
6	Test the service brake delivery circuits for leakage as indicated in "STEP 6 IN DETAIL".
7	Test the one way check valves operation as indicated in "STEP 7 IN DETAIL".
8	Test the operation of the dual air system as indicated in "STEP 8 IN DETAIL".

End of procedure

Continued on next page.

STEP 3 IN DETAIL: To test compressed-air supply system (pressure build-up, low pressure warning, governor operation)

Step	Action
3.1	Connect an accurate pressure gauge to the test fitting (identified by two red adhesive tapes) behind the front bumper.
3.2	<p data-bbox="379 416 466 501"></p> <p data-bbox="491 416 715 452">WARNING!</p> <p data-bbox="491 483 1378 519">Use appropriate hearing protection while draining the air tanks.</p> <p data-bbox="357 551 1394 618">Completely drain the entire air system by using the drain cocks on the air tanks. Refer to figure 9 at the end of this service bulletin for air tanks location.</p> <div data-bbox="600 636 1131 1021" style="text-align: center;"> <p data-bbox="1059 994 1123 1016">001826</p> </div> <p data-bbox="619 1030 1104 1088">Figure 5: Compressed-air tank drain cock, previous model</p> <p data-bbox="619 1111 721 1160">1. Closed 2. Open</p>
3.3	Close the air tanks cocks if the compressed-air system is drained.
3.4	<p data-bbox="357 1223 718 1258">Turn the vehicle ignition on.</p> <p data-bbox="357 1272 1394 1339">Low air warning on dashboard display should appear and low air buzzer should sound. If not so, check installation.</p> <div data-bbox="395 1357 927 1742" style="text-align: center;"> <p data-bbox="798 1715 919 1738">007429_en im</p> </div> <p data-bbox="944 1469 1410 1550">Figure 6: Low air warning on dashboard display (example shows a low pressure condition in circuit 2)</p> <ul data-bbox="992 1581 1433 1720" style="list-style-type: none"> (1) Front axle brakes tank (2) Drive-axle service brakes tank (3) Trailing-axle (service) brakes tank (4) ZF Astronic transmission circuit (if applicable)

Continued on next page.

3.5	Start the engine and run at 1,600 rpm. Low air warning should disappear and buzzer should stop when pressure reaches 80 psi. If not so, check installation.						
3.6	Start timing as system pressure reaches 85 psi and stop at 100 psi. Air build-up time should be 45 seconds or less. If the build-up time is excessive, check: <ul style="list-style-type: none"> • for excessive air system leakage; • for restrictions in the air compressor inlet or discharge lines (carbon build-up); • Air compressor condition (excessive wear on piston rings and/or cylinders); • operation of air compressor inlet and discharge valves. 						
3.7	Idle the engine. Observe reading on the air pressure gauge when governor cuts out the compressor. The reading should be as shown in table 2. <table border="1" style="margin-left: auto; margin-right: auto;"> <thead> <tr> <th colspan="2" style="text-align: center;">Table 2: Governor setting</th> </tr> <tr> <th style="text-align: center;">Cut-in pressure (psi)</th> <th style="text-align: center;">Cut-out pressure (psi)</th> </tr> </thead> <tbody> <tr> <td style="text-align: center;">115 +0/-5 psi</td> <td style="text-align: center;">135 ± 5 psi</td> </tr> </tbody> </table>	Table 2: Governor setting		Cut-in pressure (psi)	Cut-out pressure (psi)	115 +0/-5 psi	135 ± 5 psi
Table 2: Governor setting							
Cut-in pressure (psi)	Cut-out pressure (psi)						
115 +0/-5 psi	135 ± 5 psi						
3.8	With the engine still running, slowly reduce air pressure in the system by applying and releasing the brakes. Observe reading on pressure gauge when governor cuts in the compressor. The reading should be as shown in table 2. If not so, check the operation of the governor and the unloading mechanism on the compressor.						



STEP 4 IN DETAIL: To test tank supply circuit for leakage

Step	Action
4.1	Connect an accurate pressure gauge to the test fitting (identified by two red adhesive tapes) behind the front bumper.
4.2	Fully charge the air system and stop the engine.
4.3	Allow pressure to stabilize for at least 1 minute.
4.4	Observe the pressure gauge for 2 minutes, and note any pressure drop. Pressure drop should not be more than 3 psi per minute. If not so, coat all air line connections and pneumatic components with a water and soap solution. Bubbles will indicate an air leak, and none should be permissible. Repair or replace defective parts.

STEP 5 IN DETAIL: To test parking brake operation

Step	Action
5.1	Connect an accurate pressure gauge to the test fitting in the air line leading to the spring brake part of the brake cylinder of the left-hand drive wheel.
5.2	Only in case of parking brake cylinders on the trailing axle (refer to table 1): connect also an accurate pressure gauge to the test fitting in the air line leading to the spring brake part of the brake cylinder of the left-hand trailing wheel.
5.3	Fully charge the air system and stop the engine.

Continued on next page.

5.4	<p>Pull the parking brake button to apply the parking brake. The pressure gauge should indicate no pressure.</p> <div data-bbox="710 338 1008 645" style="text-align: center;">  </div> <p style="text-align: right;">Figure 7: Parking brake button</p>
5.5	<p>Push and hold the emergency parking brake release button to release the parking brake. The pressure gauge(s) should indicate pressure.</p> <div data-bbox="710 748 1015 1048" style="text-align: center;">  </div> <p style="text-align: right;">Figure 8: Emergency parking brake release button</p>
5.6	<p>Release the emergency parking brake release button.</p>
5.7	<p>Push the parking brake button to release the parking brake. The pressure gauge(s) should indicate pressure.</p>
5.8	<p>Reduce air pressure in the system by applying and releasing the foot brake.</p> <p>Low air warning on dashboard display should appear and low air buzzer should sound when pressure drops to 80 psi. Drive axle spring brakes should apply when pressure drops to approximately 60 psi.</p>

STEP 6 IN DETAIL: To test service brake delivery circuits for leakage

Step	Action
6.1	<p>Connect accurate pressure gauges to:</p> <ul style="list-style-type: none"> • the test fitting in the air line leading to the brake cylinder of a front axle wheel; • the test fitting in the air line leading to the service part of a brake cylinder of a drive axle wheel; • the test fitting in the air line leading to (the service part of) a brake cylinder of a trailing axle wheel;
6.2	<p>Fully charge the air system and stop the engine.</p>
6.3	<p>Apply the foot brake pedal, allow pressure to stabilize for at least 1 minute.</p>
6.4	<p>Hold down the foot brake pedal for 2 minutes while observing the pressure gauges. Pressure drop should not be more than 4 psi per minute. If not so, coat all brake air line connections and pneumatic components with a water and soap solution. Bubbles will indicate an air leak, and none should be permissible. Repair or replace defective parts.</p>

Continued on next page.

STEP 7 IN DETAIL: To test operation of one way check valves



WARNING!

Use appropriate hearing protection while draining the air tanks.

Step	Action
7.1	Fully charge the air system and stop the engine.
7.2	Retrieve the compressed-air tank pressures screen on the dashboard display through the garage feature menu.
7.3	Drain the wet tank. The compressed-air tank pressures screen on the dashboard display should not indicate a loss of pressure.
7.4	Close the wet tank drain cock.

STEP 8 IN DETAIL: To test operation of dual air system



WARNING!

Use appropriate hearing protection while draining the air tanks.

Step	Action
8.1	Connect accurate pressure gauges to: <ul style="list-style-type: none">• the test fitting in the air line leading to the brake cylinder of a front axle wheel;• the test fitting in the air line leading to the service part of a brake cylinder of a drive axle wheel;• the test fitting in the air line leading to (the service part of) a brake cylinder of a trailing axle wheel;
8.2	Fully charge the air system and stop the engine.
8.3	Drain the drive axle service brakes tank.
8.4	Make a service brake application and check whether the pressure gauges connected to the front and trailing axle brakes indicate pressure.
8.5	Close the drain valve of the drive axle service brakes tank.
8.6	Start the engine and fully charge the air system again.
8.7	Stop the engine.
8.8	Drain the front axle brakes tank.
8.9	Make a service brake application and check whether the pressure gauges connected to the drive and trailing axle brakes indicate pressure.
8.10	Close the drain valve of the front axle brakes tank.
8.11	Start the engine and fully charge the air system again.
8.12	Stop the engine.
8.13	Drain the trailing axle brakes tank.
8.14	Make a service brake application and check whether the pressure gauges connected to the front and drive axle brakes indicate pressure.
8.15	Close the drain valve of the trailing axle brakes tank.
8.16	Start the engine and fully charge the air system again.
8.17	Stop the engine.

Continued on next page.

LOCATION OF COMPRESSED-AIR TANKS

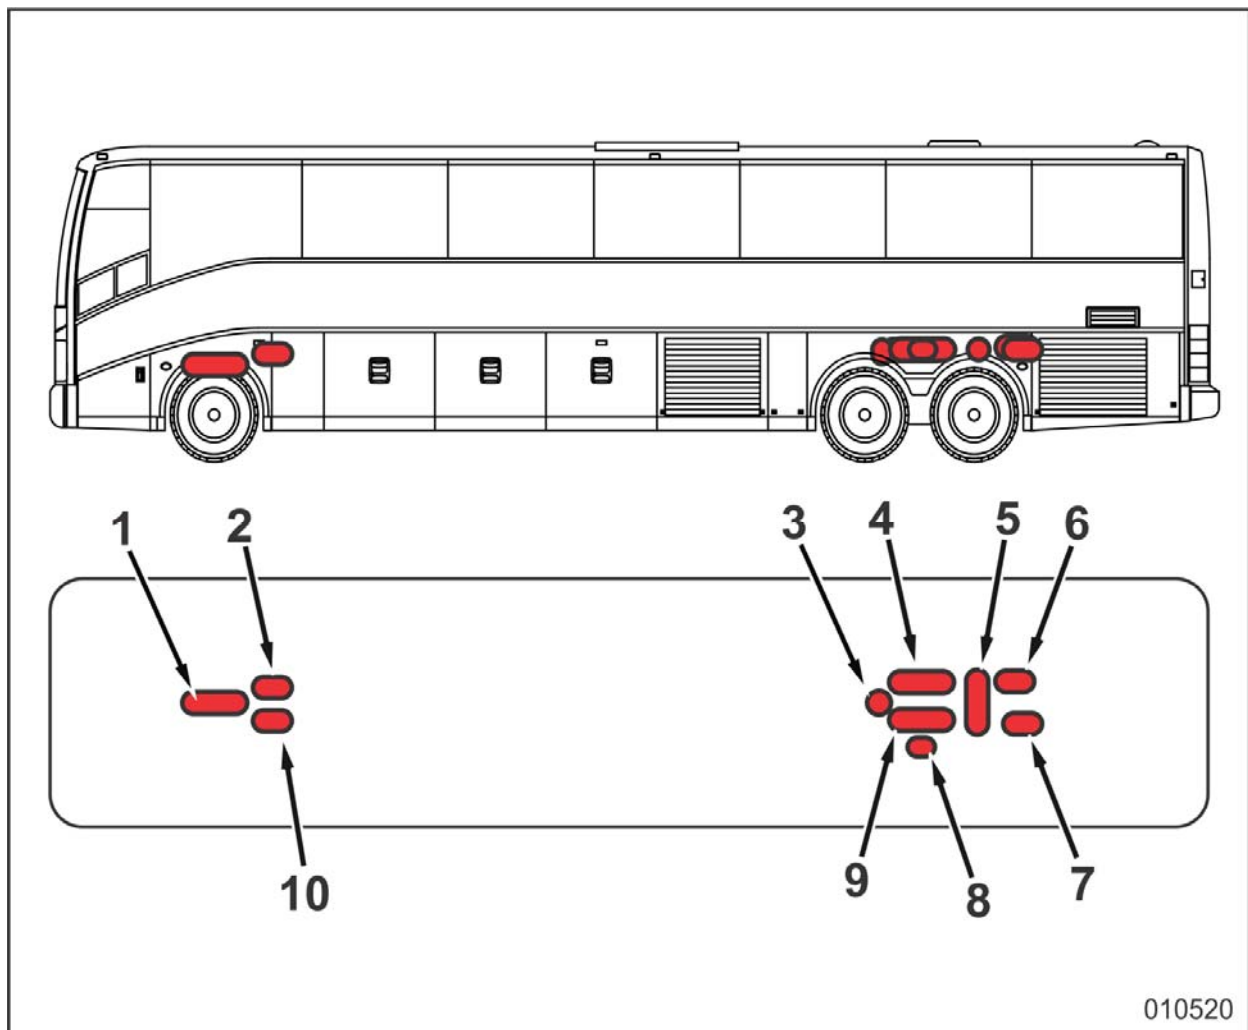


Figure 9: Location of compressed-air tank on CX45

1. Front axle brakes
2. Parking brake emergency release
3. Wet tank
4. Accessories
5. Rear raising
6. Trailing axle brakes
7. ZF Astronic (vehicles with ZF Astronic transmission only)
8. Air-dryer regeneration
9. Drive axle service brakes
10. Kneeling system

HELP DESK:

Consult ABC Customer Care & Parts Source toll-free for guidance on 1-877-427-7278. Listen for the prompts for warranty and select that option.

Continued on next page.

DISCLAIMER:

The procedures contained herein are not exclusive. Van Hool cannot possibly know, evaluate, or advise the transportation industry of all conceivable ways in which a procedure may be undertaken or of the possible consequences of each such procedure. Other procedures may be as good, or better, depending upon the particular circumstances involved. Each carrier who uses the procedures herein must first satisfy itself thoroughly that neither the safety of its employees or agents, nor the safety or usefulness of any products, will be jeopardized by any procedure selected.

INFORMATION HANDLING:

Important supplements to and modifications of technical information not yet included in the manual, are communicated by means of Service Bulletins.

VAN HOOL CUSTOMER PORTAL:

Consult the customer portal regularly for the latest service documentation. Beside the maintenance manual, you will also find the operating manual and the spare parts catalogue of your vehicle on the customer portal. The customer portal is accessible through www.vanhool.be, and only with a code (password) from Van Hool. If you do not have a password yet, request it by using the link on the Van Hool website.